




INSTALLATION INSTRUCTIONS


Accessory	Application	Publications No.
REAR SPLASH GUARD P/N 08P09-SJC-100A	2013 RIDGELINE	All 13360
		Issue Date SEP 2012

PARTS LIST

Left rear splash guard

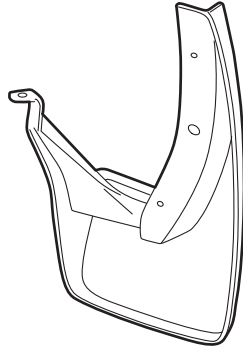

Right rear splash guard

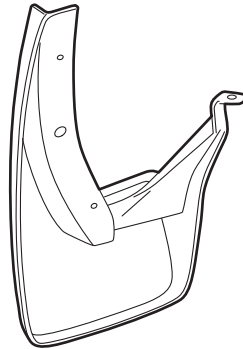

2 Clips



4 Self-tapping screws



TOOLS AND SUPPLIES REQUIRED

Stubby phillips screwdriver


Flat-tip screwdriver

INSTALLATION


Customer Information: The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by “do-it-yourselfers.”

NOTE:


- Do not damage the paint finish.
 - Wash and wax the areas to be covered. Use a high quality paste wax.
1. Remove two self-tapping screws from the rear bumper on the left side.

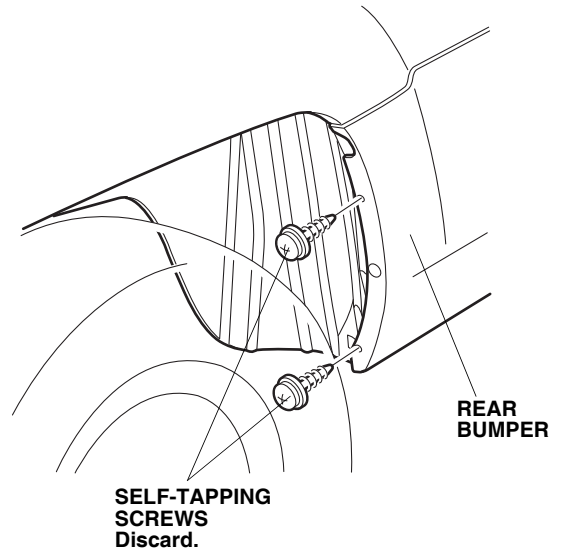


2. Remove one vehicle clip from the left rear inner fender.

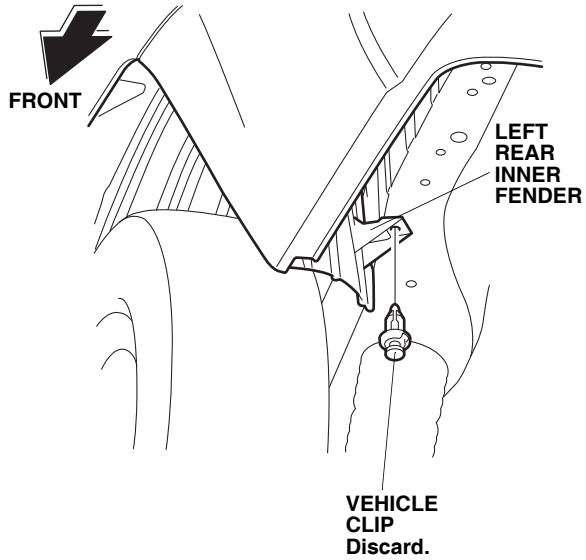

3. While holding the left rear splash guard against the vehicle, secure the splash guard with a new clip.

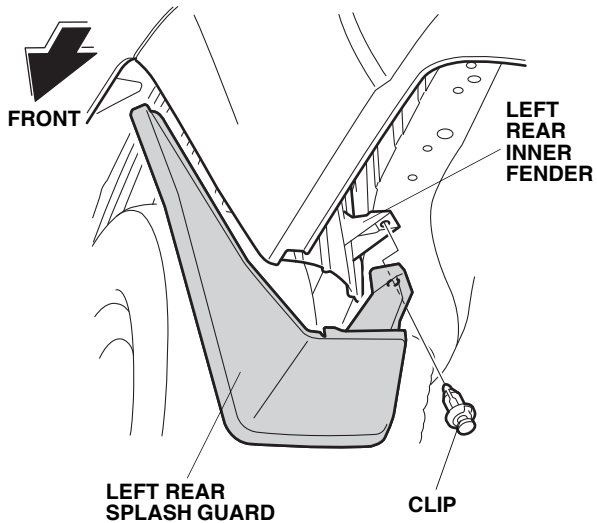

4. Install the left rear splash guard with two self-tapping screws in the order as shown. Make sure that there is no gap between the rear bumper and the splash guard before tightening the screws.

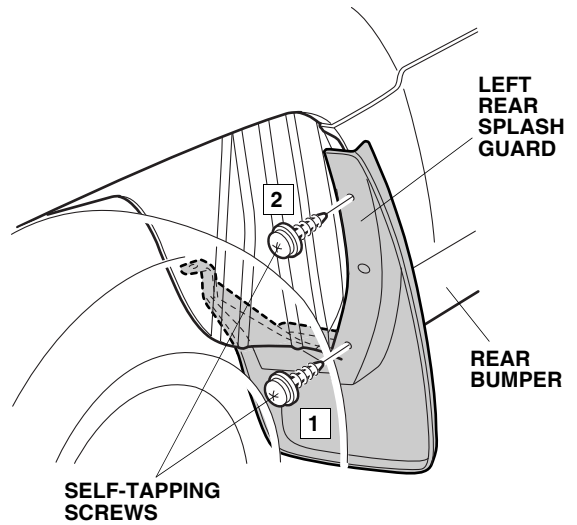

5. Repeat steps 1 through 4 on the right side of the vehicle.